

ENGLISH

Translation of the original instructions in full

PRODUCT DESCRIPTION AND INTENDED USE

Era P BD - Era W BD transmitters are part of the "ERA P - ERA W" ranges by Nice and are designed to control automatic outdoor awnings, sun screens and shutters, or mixed assemblies of Nice automations (scenarios): **any other use is unsuitable and prohibited!**

Era P BD - Era W BD transmitters are compatible with receivers that use the "Code" one-way radio code system or the "BD" two-way code system. The latter system offers the exclusive advanced functions of the "Nice Opera" system, with additional functions, such as:

- sending of the receiver's confirmation of the command received; sending to the transmitter of confirmation that the command transmitted was received by the receiver; error, etc.)

Functional specifications

The "Era P" range consists of portable models ("P") while the "Era W" range consists of wall mounted models ("W"). One or 6 "units" are available to send commands to, as well as models with 2 commands for the management of the weather sensors. • 6 "units" models dedicated to each user to temporarily hang the transmitter on the wall, others are provided with a plate to mount it on the wall. To install this accessory please refer to fig. 2 or 3. • Fig. 1 reports all the keys which may be on the transmitters, based on the model. The use is as follows:

REPLACING THE BATTERIES

When the batteries run down, the range of the transmitter is significantly reduced. When pressing any key you will find that the LED takes a while to light up (= batteries almost exhausted) and that the brightness of the LED is dimmed (= batteries completely exhausted). In these cases, in order to restore the normal operation of the transmitter, you need to replace the exhausted batteries with two of the same type, observing the polarity shown in fig. 4 or 5.

Enable/Disable acoustic beep

The transmitter leaves the factory with the acoustic beep enabled. It can be disabled or enabled again at any time using the following procedure:

- To DISABLE: press ESC and (▼) twice at the same time;
- To ENABLE: press ESC and (▲) twice at the same time.

Delete the association of a group (only for models P6S BD, P6SV BD and W6S BD)

To delete the automations associated with a group:

- press the key associated with the relevant group;
- press the PRG and ESC keys simultaneously for 8 seconds, until the LED for the selected group flashes red (fig. 1-G).

Delete the association of all groups

To delete the automations associated with all groups:

- press the PRG, ESC and (i) keys simultaneously for 8 seconds, until the LEDs for the groups flash red (fig. 1-G).

Sending commands using the "slider" surface (only for P6SV BD models)

In order to send a command using the "slider", just touch the dedicated surface with your finger in the desired point, or slide your finger across the surface in the desired direction. With models P6V and P6SV, before a command can be sent, the "group" it should be addressed to must be selected. After a command has been sent, wait until the LED goes out before another command can be sent. Prolonged pressure on the "slider" surface will place the transmitter in stand-by. To reactivate it just press the "slider" surface once again or another key.

MEMORISING THE TRANSMITTER

To memorise the transmitter in a control unit (or in a receiver) it is possible to choose one of the following procedures, compatibly with the presence of this in the manual of the control unit or the receiver:

- A - Memorisation in "Mode I"
- B - Memorisation of a new transmitter through another already memorised
- C - Memorisation through the "Enable Code" received from a previously memorised transmitter

The detailed instructions of each procedure are reported in the instruction manual of the motor or the control unit with which you want to make the transmitter work. These manuals are also available in the website: www.niceforyou.com. Since in the manuals the transmitter keys may be identified by symbols or numbers, please refer to fig. 1-B to know the correspondence between these and the transmitter keys.

SIMPLIFIED EU DECLARATION OF CONFORMITY

To perform this kind of memorisation, refer to the manual for the automation the transmitter is to be associated with. This mode automatically transfers, all together, the various commands available in the motor, in the various keys available on the transmitter, without giving the installer the possibility of changing the combination among commands and keys.

COMPLIANCE WITH THE FCC RULES (PART 15) AND RSS-210 RULES

This device complies with Industry Canada's licence-exempt RSS-210s, and with Part 15 of the FCC rules of the United States of America. Operation is subject to the following two conditions: (1) this device may not cause interference; (2) this device must accept the combination of the commands and the programming carried out. For a detailed outline of the programmable functions, refer to the instruction manual for the receiver/control unit.

TESTING THE TRANSMITTER

Before memorising the transmitter in the receiver of the motor, check its proper operation by pressing any key and observing whether the LED lights up (fig. 1-G). If it does not, refer to the section entitled "Replacing the Battery" in this manual.

SPECIFIC FUNCTIONS OF THE TRANSMITTER

Select a "group" and send a command (only for P6S BD, P6SV BD, W6S BD model)

With these transmitter models, prior to sending a command it is necessary to select the "unit" (i.e. the automation mechanisms associated to this) to send the command to. After selecting the unit, the LED (fig. 1-G) remains lit orange for a few seconds and, before its turns off, it is possible to select other units to be added to the first selected (to eliminate a unit selected by mistake, turn off the LED by briefly pressing the associated key). After selecting the units desired, when the LEDs automatically turn off, the units will remain in the transmitter's memory until a new unit/s are selected. While these remain in the memory it will be possible to send them commands without having to select them first.

ready memorised transmitter (old) to a transmitter to be memorised (new) allows the latter to be recognised by the motor and, therefore, be automatically memorised by this during the sending of the first commands.

The procedure is as follows:

01. On the "old" transmitter:

- remove and insert the battery. The LEDs (fig. 1-G), associated with a group that contains at least one stored automation, will flash green. Press and release the key for the group that contains the enabling code to be transferred. The LED associated with the group will flash orange.

02. On the "new" transmitter:

hold the key down ▲ (for models P6S BD, P6SV BD and W6S BD, first briefly press the "group" in which you wish to store the enabling code). When the certificate is received, the new transmitter emits an acoustic beep (= enabling code has been transferred). At this point 30 attempts to send a command to the automation are available to conclude the procedure.

ERROR NOTIFICATION

The LEDs (fig. 1-G) on the transmitter will begin to flash red in the event of the situations listed below:

- Transmission attempt without having first selected a channel (e.g. after having removed and replaced the batteries);
- PRG or ESC are pressed with more than one group selected.

Note: if the automation requests the "man present" mode, the LED (fig. 1-G) associated with the selected group flashes quickly while the command is being sent. The "man present" mode only works for one group at a time.

REPLACING THE BATTERIES

When the batteries run down, the range of the transmitter is significantly reduced. When pressing any key you will find that the LED takes a while to light up (= batteries almost exhausted) and that the brightness of the LED is dimmed (= batteries completely exhausted). In these cases, in order to restore the normal operation of the transmitter, you need to replace the exhausted batteries with two of the same type, observing the polarity shown in fig. 4 or 5.

Enable/Disable acoustic beep

The transmitter leaves the factory with the acoustic beep enabled. It can be disabled or enabled again at any time using the following procedure:

Delete the association of a group (only for models P6S BD, P6SV BD and W6S BD)

To delete the automations associated with a group:

- press the key associated with the relevant group;
- press the PRG and ESC keys simultaneously for 8 seconds, until the LED for the selected group flashes red (fig. 1-G).

Delete the association of all groups

To delete the automations associated with all groups:

- press the PRG, ESC and (i) keys simultaneously for 8 seconds, until the LEDs for the groups flash red (fig. 1-G).

Sending commands using the "slider" surface (only for P6SV BD models)

In order to send a command using the "slider", just touch the dedicated surface with your finger in the desired point, or slide your finger across the surface in the desired direction. With models P6V and P6SV, before a command can be sent, the "group" it should be addressed to must be selected. After a command has been sent, wait until the LED goes out before another command can be sent. Prolonged pressure on the "slider" surface will place the transmitter in stand-by. To reactivate it just press the "slider" surface once again or another key.

MEMORISING THE TRANSMITTER

To memorise the transmitter in a control unit (or in a receiver) it is possible to choose one of the following procedures, compatibly with the presence of this in the manual of the control unit or the receiver:

- A - Memorisation in "Mode I"
- B - Memorisation of a new transmitter through another already memorised
- C - Memorisation through the "Enable Code" received from a previously memorised transmitter

The detailed instructions of each procedure are reported in the instruction manual of the motor or the control unit with which you want to make the transmitter work. These manuals are also available in the website: www.niceforyou.com. Since in the manuals the transmitter keys may be identified by symbols or numbers, please refer to fig. 1-B to know the correspondence between these and the transmitter keys.

A - Memorisation in "Mode I"

To perform this kind of memorisation, refer to the manual for the automation the transmitter is to be associated with. This mode automatically transfers, all together, the various commands available in the motor, in the various keys available on the transmitter, without giving the installer the possibility of changing the combination among commands and keys.

B - Memorisation of a new transmitter through another already memorised

This procedure memorises additional transmitters, if at least one transmitter is already memorised in the motor. The procedure memorises a new transmitter in the motor, by working at a maximum distance of 20m from this, together with another transmitter already memorised in the same motor. The procedure lets the new transmitter memorise the same commands in the one already memorised.

C - Memorisation through the "Enable Code"

This procedure is specific for the motors and the control unit which are part of the Era nice line. Before memorising the transmitter in the receiver of the motor, check its proper operation by pressing any key and observing whether the LED lights up (fig. 1-G). If it does not, refer to the section entitled "Replacing the Battery" in this manual.

FONCTIONS SPÉCIFIQUES DE L'ÉMETTEUR

Important - This procedure is specific for the motors and the control unit which are part of the Era nice line. The transmitters of the Era P and Era W ranges have an "enable code". The transfer of this code from an al-

FRANÇAIS

Traduction des instructions originales

DESCRIPTION DU PRODUIT ET APPLICATION

Les émetteurs Era P BD - Era W BD font partie des familles "ERA P - ERA W" ranges by Nice et sont destinés à la commande d'automatisations pour les stores d'extérieur, les brise-soleils, les stores roulants ou des ensembles mixtes d'automatisations Nice (scénarios); **toute utilisation est impropre et interdite** ! Les émetteurs Era P BD - Era W BD sont compatibles avec les récepteurs qui adoptent la codification radio monodirectionnelle "O-Code" et la codification bidirectionnelle "BD". Cette dernière possède des fonctions avancées et exclusives du système "Nice Opera" et d'autres caractéristiques, telles que :

- envoi de la confirmation du récepteur de la commande reçue; envoi à la transmitter de la confirmation que la commande transmise a été reçue par le récepteur;
- envoi de l'état de l'automatisation (ouverture, fermeture, anomalie, etc.).

Caractéristiques fonctionnelles

La famille "Era P" est composée de modèles portables ("P") alors que la famille "Era W" est composée de modèles à fixation murale ("W"). Des modèles de 1 à 6 "groupes" sont disponibles auxquels adresser les commandes et les modèles disposant de commandes pour la gestion des capteurs climatiques. Certains modèles sont dotés d'un port USB pour programmer directement l'émetteur au mur. D'autres sont fournis avec un support mural pour pouvoir temporairement l'accrocher sur le mur. Pour installer cet accessoire veuillez se référer à la fig. 2 ou 3. • Fig. 1 rapporte tous les clés qui peuvent être présentes sur l'émetteur, basé sur le modèle. Le usage est comme suit:

LED (fig. 1-G)	Résultat
On GREEN	commande reçue correctement par toutes les automatisations stockées dans le groupe
On RED	commande NON reçue par au moins un des automatisations stockées dans le groupe
PRG ou ESC	clignotement de l'indicateur de l'état de l'automatisation (ouverture, fermeture, anomalie, etc.)

SIGNAL D'ANOMALIE

Les Led (fig. 1-G) de l'émetteur, en présence de l'une des situations énumérées ci-dessous, émettront des clignotements :

- tentative d'envoyer une commande dans un groupe que l'on connaît pas;
- envoi de la confirmation du récepteur de la commande reçue à l'émetteur jusqu'à la sélection d'un nouveau groupe (ou plusieurs groupes);
- envoi de l'état de l'automatisation (ouverture, fermeture, anomalie, etc.).

Caractéristiques fonctionnelles

La série "Era P" est composée de modèles portatifs ("P"), alors que la série "Era W" est composée de modèles à fixation murale ("W"). Les modèles de 1 à 6 "groupes" sont disponibles auxquels adresser les commandes et les modèles disposant de commandes pour la gestion des capteurs climatiques. Certains modèles sont dotés d'un port USB pour programmer directement l'émetteur au mur. D'autres sont fournis avec un support mural pour pouvoir temporairement l'accrocher sur le mur. Pour installer cet accessoire veuillez se référer à la fig. 2 ou 3. • Fig. 1 rapporte tous les clés qui peuvent être présentes sur l'émetteur, basé sur le modèle. Le usage est comme suit:

LED (fig. 1-G)	Résultat
LED (fig. 1-G)	commande reçue correctement par toutes les automatisations stockées dans le groupe
PRG ou ESC	clignotement de l'indicateur de l'état de l'automatisation (ouverture, fermeture, anomalie, etc.)

SIGNAL D'ANOMALIE

Les Led (fig. 1-G) de l'émetteur, en présence de l'une des situations énumérées ci-dessous, émettront des clignotements :

- tentative d'envoyer une commande dans un groupe que l'on connaît pas;
- envoi de la confirmation du récepteur de la commande reçue à l'émetteur jusqu'à la sélection d'un nouveau groupe (ou plusieurs groupes);
- envoi de l'état de l'automatisation (ouverture, fermeture, anomalie, etc.).

Caractéristiques fonctionnelles

La famille "Era P" est composée de modèles portatifs ("P"), alors que la famille "Era W" est composée de modèles à fixation murale ("W"). Des modèles de 1 à 6 "groupes" sont disponibles auxquels adresser les commandes et les modèles disposant de commandes pour la gestion des capteurs climatiques. Certains modèles sont dotés d'un port USB pour programmer directement l'émetteur au mur. D'autres sont fournis avec un support mural pour pouvoir temporairement l'accrocher sur le mur. Pour installer cet accessoire veuillez se référer à la fig. 2 ou 3. • Fig. 1 rapporte tous les clés qui peuvent être présentes sur l'émetteur, basé sur le modèle. Le usage est comme suit:

LED (fig. 1-G)	Résultat
LED (fig. 1-G)	commande reçue correctement par toutes les automatisations stockées dans le groupe
PRG ou ESC	clignotement de l'indicateur de l'état de l'automatisation (ouverture, fermeture, anomalie, etc.)

SIGNAL D'ANOMALIE

Les Led (fig. 1-G) de l'émetteur, en présence de l'une des situations énumérées ci-dessous, émettront des clignotements :

- tentative d'envoyer une commande dans un groupe que l'on connaît pas;
- envoi de la confirmation du récepteur de la commande reçue à l'émetteur jusqu'à la sélection d'un nouveau groupe (ou plusieurs groupes);
- envoi de l'état de l'automatisation (ouverture, fermeture, anomalie, etc.).

Caractéristiques fonctionnelles

